
 
 


 






 




 




 





 
 

 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Menu Off	
Mute		Menu Down	
Update		Back	
Reveal		Volume+	
Subt.List		Chan.Up	
Sleep Timer		Volume-	
Txt Stop		Menu audio	
Return TV		Chan.Down	
Info		1	
Text		2	
Txt Expand		3	
Menu		4	
Display		5	
Menu Up		6	
Menu Left		7	
OK Enter		8	
Menu Right		9	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Guide -/-- 1.	 Guide		
0/10	 0		
2.Fav P/C 2.	 Pre Ch		
Tone-	 D. Menu		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		
Contrast+	 Shift + Ch +		
Contrast-	 Shift + Ch -		
Surround	 Shift + Red		
Nicam/Mono	 Shift + Green		
Level L	 Shift + Yellow		
Level R/Woofers	 Shift + Blue		

