




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Subtitle		Subt
	APP/*	 + 	Shift + Media
	[]/Ratio		3D
	Input		AV
	Tv/Rad		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List

Originalfernbedienung Ersatzfernbedienung

	Q.View		D. Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	FAV		Pre Ch
	Guide		Guide
	P+		Ch +
	P-		Ch -
	Info		Info
	Smart		Smart
	My APPS		Media
	Back		Back
	Settings		Options
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	T.OPT	 + 	Shift + Options
	Q.Menu		Menu
	Sleep		Sleep
	AD		Dual
	Stop		Stop
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	Rec / *		Rec

Originalfernbedienung Ersatzfernbedienung

