



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	CH.List		Smart / List
	0		0
	Recall		Back / Return
	Aspect		Shift + Picture / Format
	Sleep		Sleep / Timer
	Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Pic.Mode		Picture / Format
	S.Mode		Sound / Title
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Menu		Menu / Home
	Source		AV / Input / RDS
	Vol+		Vol+
	Tv/Radio		TV/Radio /
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	Red		Red / Netflix / Search



