
 
 

 
 

 

 
 




 
 
 
 
 
 
 



 


 
 
 

 

 

 


 






Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	VCR Eject		Shift + Eject
	DVD/VCR		Red
	DVD		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Timer Rec		Guide
	Input Select		AV
	Show View		3D

Originalfernbedienung Ersatzfernbedienung

	Return		Back
	Cancel		Exit
	Title Menu/Top		Menu
	DVD Menu		D. Menu
	Setup		Options
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right/TRK+		Right
	Left/TRK-		Left
	Enter		Ok
	Stop		Stop
	Play		Play
	Pause/Still		Pause
	I<</Skip/Index-		I<<
	<</Rew/Search		<<





Originalfernbedienung Ersatzfernbedienung

	>>/F.FWD/Search		>>
	>>I/Skip/Index		>>I
	One Touch		Text
	CM Skip		Yellow
	I> Slow		Blue
	Rec		Rec
	Rec Mode	+	Shift + Rec
	Dubbing		Format
	Audio/Audio		Dual
	Display		Info
	Zoom	+	Shift + 3D
	Repeat A-B	+	Shift + Text
	Zero Return	+	Shift + Back
	Counter		Smart
	Subtitle/ATR		Subt
	Play Mode/Repeat	+	Shift + Play
	Clock/Counter	+	Shift + Dual

Originalfernbedienung Ersatzfernbedienung

	Tv/Video		TV/R
	Progressive		List

