


 





 
 




 


 








 

 

 


 




 

 

 

 

 


 

 


 

 
 
 

 


 

 


 

 






Originalfernbedienung Ersatzfernbedienung

	Power AV	 + 	Shift + Mute / Dimmer
	Standby	 + 	Shift + Power
	System Power		Power
	CD	 + 	Shift + 3
	MD/CD-R	 	D.Menu / Top
	Tuner	 + 	Shift + 6
	Sleep	 	Sleep / Timer
	DVD	 + 	Shift + 2
	D-TV/CBL	 	Setup / OPT /
	V-AUX	 + 	Shift + AV / Input / RDS
	6CH Input		AV / Input / RDS
	VCR1		CH+ / Page+
	VCR2/DVR		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	1/Hall		1





 


 
 

 

 

 




Originalfernbedienung Ersatzfernbedienung

	1/Hall CD	 + 	Shift + 1
	2/Jazz Club		2
	2/Jazz Club CD		Blue / Prime Video / Random
	3/Rock Concert		3
	3/Rock Concert		Yellow / YouTube / Repeat
	4/Enter-tainment		4
	4/Enter-tainment	 + 	Shift + 4
	5/Music Video		5
	5/Music Video CD	 + 	Shift + 5
	6/Tv Theater		6
	6/Tv Theater CD		Red / Netflix / Search
	7/Movie Theater 1		7
	7/Movie Theater 1 CD	 + 	Shift + 7
	8/Movie Theater 2		8
	8/Movie Theater 2 CD	 + 	Shift + 8
	9/[I]/DTS Sur.		9
	9/[I]/DTS Sur. CD	 + 	Shift + 9


 






Originalfernbedienung Ersatzfernbedienung

	AV Power DVD		Shift + Power
	Standby		Power
	Sleep		Sleep / Timer
	6 CH Input		Shift + 6
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	1/Hall DVD		1
	2/Jazz Club DVD		2
	3/Rock Concert		3
	4/Enter-tainment DVD		4
	5/Music Video		5
	6/Tv Theater DVD		6
	7/Movie Theater 1 DVD		7
	8/Movie Theater 2 DVD		8
	9/[1]/DTS SUR.		9
	0/Night DVD		0

Originalfernbedienung Ersatzfernbedienung

	+10/6.1/5.1		Guide / EPG / -/--
	Title/Level DVD		Subtitle / EQ
	Preset/CH Up DVD		Up
	Menu/Set Menu/A-B-C-D-E		Menu / Home
	Left/- DVD		Left
	Select DVD		OK
	Right/+ DVD		Right
	Return/Test		Back / Return
	Preset/CH Down		Down
	Display DVD		Display / Media
	Rec DVD		Rec / Rec Mode
	<< DVD		<< / Tune-
	>> DVD		>> / Tune+
	Audio		Audio / Lang I/II
	Pause DVD		Pause / Step / Freeze
	I<< DVD		I<< / Preset-
	I>> DVD		I>> / Preset+





Originalfernbedienung Ersatzfernbedienung

	Tuner		TV/Radio /
	Sleep		Sleep / Timer
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	1/Hall MD/CD-R		Shift + 1
	1/Hall Tuner		1
	2/Jazz Club		2
	2/Jazz Club Tuner		Shift + 2
	3/Rock Concert MD/CD-R		Shift + 3
	3/Rock Concert Tuner		3
	4/Entertainment MD/CD-R		Shift + 4
	4/Enter-tainment Tuner		4
	5/Music Video MD/CD-R		Shift + 5
	5/Music Video		5
	6/Tv Theater MD/CD-R		Shift + 6
	6/TV Theater		6

Originalfernbedienung Ersatzfernbedienung

	7/Movie Theater 1 MD/CD-R		Shift + 7
	7/Movie Theater 1 Tuner		7
	8/Movie Theater 2 MD/CD-R		Shift + 8
	8/Movie Theater 2 Tuner		8
	9/[I]/DTS SUR. MD/CD-R		9
	0/Night		0
	+10/6.1/5.1		Guide / EPG / -/--
	Preset/CH Up		Up
	Menu/Set Menu/ A-B-C-D-E Tuner		Menu / Home
	Preset/CH Down Tuner		Down
	Display		Display / Media
	Rec/Disc Skip MD/CD-R		Rec / Rec Mode
	<< MD/CD-R		<< / Tune-
	>> MD/CD-R		>> / Tune+
	Pause MD/CD-R		Pause / Step / Freeze
	I<< MD/CD-R		I<< / Preset-
	>>I MD/CD-R		>>I / Preset+



Tuner

