



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Display		Shift + Info
	P.Mode		Shift + Format
	Title		Shift + Smart
	ST/MO		Dual
	P.Size		Format
	Subtitle		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

**Originalfernbedienung Ersatzfernbedienung**

	0		0
	-/--		Guide
	Return		Back
	DTV/DR		TV/R
	Info		Info
	FAV		Pre Ch
	EPG		Shift + Guide
	Audio		Shift + Dual
	Tv/AV		AV
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Tv Setup		Smart
	DVB Menu		Menu
	DVD Setup		Media
	Eject		Eject





**Originalfernbedienung    Ersatzfernbedienung**

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Text		Text
	Hold		Options
	Index		List
	Cancel		Shift + Exit
	Reveal		D. Menu
	Mix		Sleep
	Sub Page		Shift + Subt
	Size		3D
	Red/Program		Red
	Green/Intro		Green
	Yellow/Repeat		Yellow
	Blue/A-B		Blue

**Originalfernbedienung    Ersatzfernbedienung**

	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Slow/Step		Shift + Media
	Goto		Shift + Text
	Angle		Exit
	Zoom		Shift + Eject

