
 

 



 
 





 


 

 
 






 
 
 
 



 
 


 

 






 
 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Smart	
Reveal		Media	
Subt.List		Subt	
Sleep Timer		Sleep	
Txt Stop		Stop	
Info		Info	
Menu video		D. Menu	
Return TV		TV/R	
Txt Expand		Eject	
Text		Text	
Menu		Menu	
Menu Up		Up	
Display		Shift + Info	
TV/AV		AV	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Off		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
Chan.Up		Ch +	
Menu audio		Dual	
Volume-		Vol -	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8		8	
9		9	
Guide -/-- 1.		Guide	
0/10		0	
2.Fav P/C 2.		Pre Ch	
Red		Red	
On/Tim		Options	
Nicam/Mono		List	
Off/Tim		3D	
Green		Green	
Mix Scan	 + 	Shift + Text	
Color- S.Std	 + 	Shift + Dual	
Yellow		Yellow	
Color+ P.Std	 + 	Shift + Format	
Blue		Blue	
Contrast+	 + 	Shift + Ch +	
Contrast-	 + 	Shift + Ch -	
3.*	 + 	Shift + 3	
Level L		<<	
Level R/Woofer		>>	
Audio-	 + 	Shift + Vol -	
4.# 16:9		Format	
Audio+	 + 	Shift + Vol +	
Tone-	 + 	Shift + Down	
Tone+	 + 	Shift + Up	

