


 

 

 









 




 




 

 








Originalfernbedienung Ersatzfernbedienung

|   |        |   |         |
|---|--------|---|---------|
|    | Power  |    | Power   |
|    | Mute   |    | Mute    |
|    | [ ]    |    | TV/R    |
|    | Sound  |    | Dual    |
|    | *      |    | Options |
|    | Source |    | AV      |
|    | [X]    |    | Format  |
|    | 1      |    | 1       |
|    | 2      |    | 2       |
|   | 3      |   | 3       |
|  | 4      |  | 4       |
|  | 5      |  | 5       |
|  | 6      |  | 6       |
|  | 7      |  | 7       |
|  | 8      |  | 8       |
|  | 9      |  | 9       |
|  | 0      |  | 0       |

Originalfernbedienung Ersatzfernbedienung

|   |             |   |        |
|---|-------------|---|--------|
|    | [i+]/[?]    |    | Info   |
|    | Red         |    | Red    |
|    | Green       |    | Green  |
|    | Yellow      |    | Yellow |
|    | Blue        |    | Blue   |
|    | [≡]/Text    |    | Text   |
|    | -/--/Recall |    | Pre Ch |
|    | Guide       |    | Guide  |
|    | Up          |    | Up     |
|   | OK          |   | Ok     |
|  | Down        |  | Down   |
|  | Right       |  | Right  |
|  | Left        |  | Left   |
|  | Prog+       |  | Ch +   |
|  | Prog-       |  | Ch -   |
|  | Vol+        |  | Vol +  |
|  | Vol-        |  | Vol -  |



