





 




 













 

 









 


 

 

 



 

 





Originalfernbedienung Ersatzfernbedienung

	On		Power
	Off		Shift + Power
	P.Mode		Format
	S.Mode		Dual
	Clock Display		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Still		Pause
	Zoom		Eject


Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	Vol +		Vol +
	Vol -		Vol -
	CH +		Ch +
	CH -		Ch -
	Source		AV
	Menu		Menu
	Timer		Shift + AV
	Info		Info
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Red / Auto		Red
	Green / S.Effect		Green





Originalfernbedienung Ersatzfernbedienung

 P. SIZE	Yellow / P.Size	 C	Yellow
 MDC	Blue / MDC	 D	Blue
 PIP ON	PIP On	 APP MEDIA	Media
 SIZE	Size	 ECO 3D	3D
 LOCATE	Locate	 REPEAT TEXT	Text
 SOURCE	Source 2	 SETTINGS OPT	Options
 SWAP	Swap	 RETURN BACK	Back
 S.SEL	S.Sel	 PROG SLEEP	Sleep
	+100	 GUIDE	Guide

Originalfernbedienung Ersatzfernbedienung

