

 
 







 



 




 

 

 




 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	5		5
	4		4
	6		6
	7		7
	8		8
	9		9
	0		0
	PR.List		List
	Recall		Back
	Vol+		Vol +
	Vol-		Vol -
	Pic.Mode		Shift + Format

Originalfernbedienung Ersatzfernbedienung

	S.Mode		Shift + Dual
	Source		AV
	CH+		Ch +
	CH-		Ch -
	Exit		Exit
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Zoom		Eject
	Sleep		Sleep
	Rec		Rec
	Rec List		Smart
	Red		Red
	Green		Green



