
























 





Originalfernbedienung Ersatzfernbedienung

<<		<< / Tune-
>>		>> / Tune+
I<<		I<< / Preset-
>>I		>>I / Preset+
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
		Power
		[≡i]/Info
		Mute / Dimmer
		1
		2
		3
		4
		5
		6
		7

 


 


 
 


 
 



Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	[≡?]/Source		Eject / Surround
	0		0
	O)/I/II/Audio		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH+		CH+ / Page+
	Index		Display / Media
	Vol+		Vol+
	CH-		CH- / Page-
	List		Smart / List





Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -/--
	Recall		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]		Text / Goto
	[≡+]/Still		Zoom / Size
	Radio		TV/Radio /
	[≡♦]/[++]		Picture / Format
	[≡x]		Setup / OPT /
	[≡o]/Subtitle		Subtitle / EQ
	DMP		D.Menu / Top
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

