


**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Power Tv	+	Shift + Power
	DVD	+	Shift + 2
	HDD	+	Shift + 7
	Open/Close		Eject / Surround
	Av/Input Tv	+	Shift + AV / Input / RDS
	1	1	1
	2	2	2
	3	3	3
	PR/CH+ Tv	+	Shift + CH+ /
	4	4	4
	5	5	5
	6	6	6
	PR/CH- Tv	+	Shift + CH- /
	7	7	7
	8	8	8
	9	9	9





 











 

 




 


 



 



**Originalfernbedienung Ersatzfernbedienung**

	Vol+ Tv		Vol+
	Dubbing		Setup / OPT /
	0		0
	AV/Input		AV / Input / RDS
	Vol- Tv		Vol-
	<< Scan		<< / Tune-
	Scan >>		>> / Tune+
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	Pause/Step		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Home		Menu / Home
	Up		Up
	PR/CH+		CH+ / Page+
	Menu/List		D.Menu / Top
	Menu/List		Smart / List





Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		OK
	Right		Right
	Display		Display / Media
	Down		Down
	PR/CH-		CH- / Page-
	Return		Back / Return
	Timeshift		Info / Angle
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	CHP.ADD		Text / Goto
	Rec		Rec / Rec Mode
	Rec Mode		Shift + Rec / Rec Mode
	Title		Sound / Title
	Thumbnail		Picture / Format
	Zoom		Zoom / Size
	Marker		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	Search		Red / Netflix / Search
	Clear		Exit / Cancel / Clear
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Tv/DVD		TV/Radio /
	*		Guide / EPG / -/--

