


 


 

 
 

 

 



 
 


 



 
 





 

 


 
 
 

 

 
 

 
 
 


 

 

 


 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info
	AV		AV
	Red/Zoom		Red
	Green/(↔)		Green
	Yellow/Timer		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue/Picture		Blue
	O)/I/I		Dual
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	[≡]		Text
	Back		Back
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	^/[+]		Format
	Play/[?]		Play
	>>/[♦]		>>





Originalfernbedienung Ersatzfernbedienung




 



 



 







 

 

 

 





 


	√/Timer		Options
	Stop/[X]		Stop
	Pause/[≡i]		Pause
	[■]		Subt
	[← ■]		TV/R
	[↑ ↓ ■]		3D
	♪	 + 	Shift + Dual

Originalfernbedienung Ersatzfernbedienung







 
 
 


 


 
 





 

 

 







 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	i		Info
	O)/I/II		Dual
	[≡]		Text
	P+		Ch +

Originalfernbedienung Ersatzfernbedienung

	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/Zoom		Red
	Green/(↔)		Green
	Yellow/Timer		Yellow
	Blue/Picture		Blue
	<<		<<
	>>/[◆]		>>
	^[+]		Format
	~/Timer		Options
	Rec/Top Menu		Rec
	Play/[?]		Play
	Stop/[X]		Stop
	Pause/[≡i]		Pause
	[■]		Subt
	[←■]		TV/R






 

 

 

 

 

 

 



 

 



 



 

 

 


Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	[↕■]		3D				
	♪		+	Shift +	Dual		
	Menu		Menu				
	Back		Back				
	OK		Ok				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				

 
 

 



 

 

 
 

 

 

 

 



 

 
 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info
	AV		AV
	O)/I/II		Dual
	Menu		Menu
	Red/Zoom		Red

Originalfernbedienung Ersatzfernbedienung

	Green/(↔)		Green
	Yellow/Timer		Yellow
	Blue/Picture		Blue
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	<<		<<
	Play/[?]		Play
	>>/[♦]		>>
	Stop/[X]		Stop
	Pause/[≡i]		Pause





Originalfernbedienung Ersatzfernbedienung

	^/[+]		Format
	~/Timer		Options
	[■]		Subt
	[←■]		TV/R
	[▽■]		3D
	♪	+	Shift + Dual
	Back		Back
	[≡]		Text

Originalfernbedienung Ersatzfernbedienung

