





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I / II
	Open/Close		Eject / Surround
	Angle		Info / Angle
	Title		Sound / Title
	Vol+		Vol+
	Prog		TV/Radio /
	Menu		Menu / Home
	Vol-		Vol-
	Setup		Setup / OPT /
	Up		Up
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Left		Left
	Enter		OK
	Right		Right























Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Down		Down
	Stop		Stop / Hold
	1		1
	2		2
	3		3
	Goto		Text / Goto
	4		4
	5		5
	6		6
	Clear		Exit / Cancel / Clear
	7		7
	8		8
	9		9
	0		0
	<< Rev		<< / Tune-
	>> Fwd		>> / Tune+





Originalfernbedienung Ersatzfernbedienung

	I<< Prev		I<< / Preset-
	>>I Next		>>I / Preset+
	P/N		D.Menu / Top
	Display		Display / Media
	Zoom		Zoom / Size
	Slow		Shift + Play /
	USB		Shift + 8
	USB		AV / Input / RDS
	A-B		Yellow / YouTube / Repeat
	Repeat		Green / APP / Repeat
	V.Mode		Picture / Format

Originalfernbedienung Ersatzfernbedienung

