








 


 
 
 

 




 




 
 





 


 







 

 

 



 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	A-B Deck		Red
	Rec Deck		Rec
	Pause Deck		Ok
	Stop Deck		Down
	<< Deck		<<
	>> Deck		>>
	< Play Deck		Left
	Play > Deck		Right
	I<< CD		I<<
	>>I CD		>>I
	Random CD		Media
	Repeat CD		Text
	Disc Skip CD		Smart
	Pause CD		Pause
	Stop CD		Stop
	Play CD		Play
	Preset Up Tuner		Ch +
	Preset Down		Ch -
	Tape 2		1
	Tape 1		2
	AUX		3
	Tuner		4
	CD		5
	Phono		6

