





 



 

 



 






 
 
















 








 
 

 



 


 
 
 









**Originalfernbedienung    Ersatzfernbedienung**


 






	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Return		Back
	Picture		Format
	TV / AV		AV
	Up		Up

**Originalfernbedienung    Ersatzfernbedienung**

	Up		Ch +
	Down		Down
	Down		Ch -
	Right		Right
	Right		Vol +
	Left		Left
	Left		Vol -
	Menu		Menu
	Menu		Ok
	Sound		Dual
	Display		Info
	Nicam / A2		Options
	Cancel		Exit
	Size		3D
	Text / Mix		Text
	Hold		Pause
	Reveal		D. Menu





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Subpage	 Subt		
 Index	 List		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Cyan	 Blue		

