









 









 





 

 

 

 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Preview		Guide
	CH RTN		Pre Ch
	Picture		Format
	Brightness		Info
	Up / CH +		Up


 



 

 

 
Originalfernbedienung Ersatzfernbedienung

	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	Menu		Menu
	Menu		Ok
	Mute		Mute
	Sleep		Sleep
	PIP		Play
	PIP CH		Pause
	PIP POS		Stop
	Teletext		Text
	Red		Red
	Green		Green





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

 Yellow	 Yellow		
 Blue	 Blue		
 MTS / Stereo	 Dual		
 AV / PC	 TV/R		
 PC BGM/RES.	 Smart		

