








 









 









 





 


 








 
 


 









 

 
 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV / SAT		AV
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SAT		Smart
	Menu		Menu
	FAV	 + 	Shift + Pre Ch
	EPG		Guide

Originalfernbedienung Ersatzfernbedienung

	Recall		Pre Ch
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Vol +		Vol +
	Vol -		Vol -
	CH&Page +		Ch +
	CH&Page -		Ch -
	Red / TTX		Red
	Red / TTX		Text
	Green / SUB.T		Green
	Green / SUB.T		Subt
	Yellow / Zoom		Yellow
	Yellow / Zoom		Eject





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

	Blue / MP		Blue		
	TV / Radio		TV/R		
	Audio		Dual		
	Pause		Pause		
	POS		Format		
	REC		Rec		
	PN		3D		
	Info		Info		
	T/S		Sleep		

