 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Fav CH		Shift + Pre Ch
	Pre Ch		Pre Ch
	Info		Info
	Menu		Menu
	Guide		Guide

Originalfernbedienung Ersatzfernbedienung

	Tools		Options
	Return		Back
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Internet		Smart
	Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol +		Vol +
	Vol -		Vol -
	Source		AV
	Mute		Mute



