



 
 

 

 
 






 


 
 
 








 

 
 














 



















Originalfernbedienung Ersatzfernbedienung

 
	POWER		Power
	INPUT		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	DTV/ATV		TV/R
	ASPECT		3D
	FREEZE		Pause
	O)I/II		Dual

Originalfernbedienung Ersatzfernbedienung

	AD		Shift + Subt
	[i+]/[≡i]		Info
	P+		Ch +
	P-		Ch -
	VOL +		Vol +
	VOL -		Vol -
	MUTE		Mute
	TEXT [≡]		Text
	[...]		Subt
	Timer		Shift + AV
	EXIT		Exit
	∧		Up
	∨		Down
	>		Right
	<		Left
	OK		Ok
	MENU		Menu





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	RETURN		Back				
	RED		Red				
	GREEN		Green				
	YELLOW		Yellow				
	BLUE		Blue				
	REVEAL [≡?]		Eject				
	TEXT HOLD		D. Menu				
	TEXT SIZE		Format				
	[≡x]		Options				

