







 
 
 






 
 




 





 



 


 
 
 




 

 

 
 
 
 

 
 
 







 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Vol+		Vol +
	Vol-		Vol -
	F		Menu
	Mute		Mute
	Preset/Folder Up		Ch +
	Prset/Folder Down		Ch -
	Jukebox/Memor		Red
	Auto Dj		Green
	Delete		Blue
	Repeat		Text
	Stop		Stop
	>>I/Tuning+		>>I
	I<</Tuning-		I<<
	Play / Pause		Pause
	Play / Pause		Play

Originalfernbedienung Ersatzfernbedienung

	Equalizer		Options
	Special EQ		Dual
	(i)		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clock		Shift + AV
	Alarm		Smart
	Voice Canceller		Yellow
	Sleep		Sleep





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
RDS/SET	RDS/Set	APP MEDIA	Media
#	Key Changer #	SEARCH TV/R	TV/R
b	Key Changer b	ECO 3D	3D
MIC ECHO	Mic Echo	AD SUBT	Subt
PTY	PTY	TIMER AV	AV
VOCAL EFFECTS	Vocal Effects	PICTURE FORMAT	Format
USB REC	USB Rec	REC MODE	Rec

