
 





 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide
	Goto		Sleep
	Mute		Mute
	Audio		Dual
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

	Auto/Angle		Smart
	USB/Dev.List		AV
	Filelist		List
	Recall		Back
	Info/Display		Info
	Text/Title		Text
	DVD/DVB		Media
	View/Tv/Radio		TV/R
	Repeat		Shift + Text
	Menu		Menu
	PBC/EPG		Shift + Guide
	Exit/Return		Exit
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right/Vol+		Right





 






 




Originalfernbedienung Ersatzfernbedienung

	Left/Vol-		Left
	Enter		Ok
	Red/Prog		Red
	Green/Clear		Green
	Yellow/Setup		Yellow
	Blue/A-B		Blue
	Vol+		Vol +
	Vol-		Vol -
	Rec		Rec
	Timeshift		3D
	Zoom		Shift + Eject
	Play		Play
	Pause		Pause
	Stop		Stop
	FAV/Step		Pre Ch
	<</Page-		<<
	>>/Page+		>>

Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	I>>		I>>
	V-Mode		Format
	L/R		Shift + D. Menu
	Slow		D. Menu
	HDMI		Options

