

 

 
 
 
 
 
 
 

 

 









 






 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[+]		3D
	[i+]/[?]		Info
	Digital		Media
	Analog		Smart
	[> <]		Format
	Audio		Dual
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Guide		Guide
	Input		AV
	Return		Back
	Tools		Options
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	OK		Ok
	Menu		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡]		Text
	♥		Shift + Pre Ch
	Vol+		Vol +





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Vol-		Vol -				
	Mute		Mute				
	Prog+		Ch +				
	Prog-		Ch -				
	Recall		Pre Ch				

