
 
 
 

 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	Language		Dual
	Angle		Format
	Subtitle		Subt
	Prog		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	10+		Guide

Originalfernbedienung Ersatzfernbedienung

	<< Rev		<<
	>> Fwd		>>
	I<< Prev		I<<
	>>I Next		>>I
	Menu		Menu
	Title		List
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Time		AV
	Setup		Options
	PBC		Shift + Guide
	Vol +		Vol +
	Vol -		Vol -
	Zoom		Shift + Eject





**Originalfernbedienung    Ersatzfernbedienung**

	Return		Back
	A-B		D. Menu
	Repeat		Text
	P-Scan		Media
	Step		Shift + Pause
	Slow		Shift + Play
	N/P		Red
	L/R		Green
	Mute		Mute
	Display		Info
	Play/Pause		Play
	Stop		Stop
	Play/Pause		Pause
	Default		Smart

**Originalfernbedienung    Ersatzfernbedienung**