







 



 
 


 
 

 
 



 
 


 
 


 






 



 









 


















Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	HDMI Control		Smart
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	<<		<<
	>>		>>
	>>I		>>I
	Screen		Format
	Lang		Dual
	Subtitle		Subt
	PIP / World		3D
	Red / Zoom		Red
	Green / Repeat		Green
	Yellow / Root		Yellow
	Blue / Title		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Swap		Pre Ch
	Up		Up
	Right		Right
	Down		Down
	Left		Left



