

 
 

 





Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Sleep		Sleep
	A. Standby		Shift + Power
	Clock/Timer		Shift + AV
	Set		Options
	Cancel		Back
	Dimmer		List
	QP Link		Subt
	AUX		AV
	Play/Pause CD		Play
	FM		Up
	AM		Down
	Stop/PTI Search		Stop
	I<<		I<<
	>>I		>>I
	Number Select		Menu
	Preset/Group/PTY Down		Left

Originalfernbedienung Ersatzfernbedienung

	Preset/Group/PTY		Right
	Display Mode		Info
	Repeat/TA/News/I		Text
	FM Mode/Play		Smart
	Sound Turbo		Dual
	AHB Pro		Eject
	Bass/Treble		TV/R
	Volume+		Vol +
	Volume-		Vol -
	Fade Muting		Mute

