 



 


 



 







 

 
















Originalfernbedienung Ersatzfernbedienung

	Power Audio		Power
	Display/Chara		Info
	Tv/Video		TV/R
	Level Meter		Media
	Motion Sensor		Smart
	Title/Del		Options
	Eco/Dimmer		Shift + 3D
	1/Mark		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	>10		Pre Ch
	10		Guide
	Karaoke Scoring		Shift + Smart
	Reserve		Shift + Options
	Vocal Masking		Shift + Dual
	Vocal Support		Shift + Subt
	Menu/PL		Menu
	Top Menu/PG		Shift + Menu
	On Screen		Shift + Info
	Fade Muting		Mute
	Up/PTY+		Up
	Down/PTY-		Down
	Right/TA/News/Inf		Right
	Left/PTY Search		Left
	Audio Vol+		Vol +
	Audio Vol-		Vol -
	Sleep		Sleep





Originalfernbedienung Ersatzfernbedienung

	A.Stby		Shift + 0
	Clock/Timer		AV
	Return		Back
	Cancel		Exit
	Set Up		D. Menu
	Stop		Stop
	Play		Play
	Pause		Pause
	←/Tuner/Play		Shift + Back
	I<<<		I<<<
	>>>I		>>>I
	<<<		<<<
	>>>		>>>
	Play/Pause		Blue
	Play/Pause USB		Yellow
	Play/Pause iPod A		Red
	Play/Pause iPod B		Green

Originalfernbedienung Ersatzfernbedienung

	Audio/MPX		Dual
	Subtitle		Subt
	Zoom		Eject
	Tuner/Audio In		Text
	File Type		Shift + TV/R
	Repeat		Shift + Text
	VFP/Scan Mode		Format
	3D Phonic/HP Surr		3D
	C.Voice		Shift + List
	DVD/Audio In		Shift + Format
	Sound Mode		List
	My Sound		Shift + Mute
	V.Bass		Shift + 7
	Super Bass		Ch +
	Super Bass Level-		Ch -
	Mic Vol+		Shift + Right
	Mic Vol-		Shift + Left





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Karaoke Setting		Shift + 9				
	Mic Mix		Shift + 8				
	Power Tv		Shift + Power				
	Repeat A-B		Shift + Play				
	Angle		Shift + 2				
	Tv Channel+		Shift + Ch +				
	Tv Channel-		Shift + Ch -				
	Tv Vol+		Shift + Vol +				
	Tv Vol-		Shift + Vol -				
	I<< Group/Title Skip		Shift + I<<				
	Group/Title Skip >>I		Shift + >>I				
	>> Group/Title		Shift + 6				
	Enter/Set		Ok				

