 

 
 
 
 
 

 
 
 

 

 
 
 

 
 


 

 




 
 





Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 Sleep	 Sleep
 Display	 Info
 Clock Timer	 AV
 Clock Timer SET	 3D
 Tuner Memory	 1
 Play Mode/Tuning Mode	 2
 Play Mode/Tuning Mode	 Shift + Play
 Repeat/FM	 3
 Repeat/FM	 Text
 Tape	 Red
 CD	 Green
 Band/Tuner	 Yellow
 Function	 Smart
 I<</-	 I<<
 >> /+	 >>
 <<	 <<

Originalfernbedienung	Ersatzfernbedienung
 >>	 >>
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Clear	 Exit
 EQ	 Media
 Enter	 Ok
 Disk Skip	 List
 Vol+	 Vol +
 Vol-	 Vol -
 Album-	 Ch -
 Album+	 Ch +

