



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tuner		4
	Tape 1 / 2		5
	Aux		6
	CD 1		1
	CD 2		2
	CD 3		3
	DSC		7
	VAC		8
	Vol -		Vol -
	Vol +		Vol +
	I< / Title -		I<<
	>I / Title +		>>I
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	<< / Album -		<<

Originalfernbedienung Ersatzfernbedienung

	>> / Album +		>>
	Repeat		Text
	Program		Shift + Sleep
	Shuffle		Smart
	Display		Info
	Rec		Rec
	CLK / Timer		Shift + AV
	Timer On / Off		AV
	DBB		Ch -
	DIM		Media
	Sleep		Sleep
	Mute		Mute
	IS		Dual
	MAX		Ch +

