 









 

 






 






 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue / Timer		Sleep / Timer
	Blue / Timer		Blue / Prime Video / Random
	Format		Picture / Format
	RES.		Display / Media
	TTX		Text / Goto
	I<<		I<< / Preset-
	S - T		Sound / Title
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Play / Pause		Play / Slow
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	Play / Pause		Pause / Step / Freeze
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	PVR List		Smart / List
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		OK
	EPG		Guide / EPG / -/-
	Info		Info / Angle
	CH +		CH+ / Page+
	CH -		CH- / Page-
	TV / RAD		TV/Radio /
	Audio		Audio / Lang I/II
	Vol +		Vol+





Originalfernbedienung Ersatzfernbedienung

	Vol -		Vol-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Fav / Marker / PC
	Recall		Back / Return

Originalfernbedienung Ersatzfernbedienung

