
 
 

 



 

 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV / R		TV/R
	Home		Smart
	FAV		Pre Ch
	Back		Back
	Audio		Dual

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	EPG		Guide
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Menu		Menu
	Exit		Exit
	Vol +		Vol +
	Vol -		Vol -
	P +		Shift + Ch +
	List		List
	P -		Shift + Ch -
	CH +		Ch +
	CH -		Ch -
	Opt		Options





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Text		Text
	SUB		Subt
	Msg		AV
	Pause		Pause
	<<		<<
	>>		>>
	Rec		Rec
	Play		Play
	I<<		I<<
	>>I		>>I
	Stop		Stop
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

