












 



















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	DTV		Shift + 1
	Radio		TV/Radio /
	USB		Shift + 8
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV Guide		Guide / EPG / -/--
	0		0

Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	Vol +		Vol+
	P.Mode		Picture / Format
	CH +		CH+ / Page+
	Vol -		Vol-
	S.Mode		Sound / Title
	CH -		CH- / Page-
	FAV		Fav / Marker / PC
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Source		AV / Input / RDS
	Down		Down
	Info		Info / Angle





Originalfernbedienung	Ersatzfernbedienung
Aspect	Shift + Picture / Format
Sleep	Sleep / Timer
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Text	Text / Goto
Text Hold	Shift + Stop /
Text/DVD Zoom	Zoom / Size
Display Power	Display / Media
Display Power	Shift + Power
Rec / DVD Menu	D.Menu / Top
Rec / DVD Menu	Rec / Rec Mode
I<<	I<< / Preset-
>>I	>>I / Preset+
Stop / Open/Close	Eject / Surround
Stop / Open/Close	Stop / Hold
Rec List / DVD Setup	Smart / List
Rec List / DVD Setup	Setup / OPT /

Originalfernbedienung	Ersatzfernbedienung
<<	<< / Tune-
>>	>> / Tune+
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze
Red / Goto	Red / Netflix / Search
Green / A-B	Green / APP / Repeat
Yellow / Angle /	Yellow / YouTube / Repeat
Blue / Repeat	Blue / Prime Video / Random

