

 
 
 





 
 



 
 
 

 


 

 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	Menu		Menu
	Text		Text
	Disp		Shift + Info
	VOD		Smart
	APP		Shift + Media
	Media		Media
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Back		Back
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down


 
 

 

 

 



 
 






Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	EPG		Guide
	Info		Info
	Vol +		Vol +
	Vol -		Vol -
	List		List
	Mute		Mute
	CH +		Ch +
	CH -		Ch -
	Cinema		Dual
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	Rec		Rec
	1		1
	2		2





Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV / Radio		TV/R
	OPT		Options

Originalfernbedienung Ersatzfernbedienung