

 
 
 
 

 
 

 
 
 
 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Open / Close		Eject
	Dimmer /		TV/R
	DVD		Shift + 1
	Tuner / B and		Shift + 2
	AUX		Shift + 3
	NTSC/PAL / EZ		Smart
	Mo/St / Slow		Shift + Play
	Sub Title		Subt
	Step		Shift + Pause
	DSP / EQ		Dual
	Repeat		Text
	I<<		I<<
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	>>I		>>I

**Originalfernbedienung    Ersatzfernbedienung**

	DOLBY PLII		Green
	Volume +		Vol +
	Volume -		Vol -
	Tuning + / CH +		Ch +
	Tuning - / CH -		Ch -
	DOLBY PLII		Yellow
	Return		Back
	Menu		Menu
	Info		Info
	Mute		Mute
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	1 / RDS Display		1
	2		2













 


 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Menu		Menu
	Cancel		Exit
	1 / RDS Display		1
	2		2
	3 / TA		3
	4 / PTY -		4
	5 / PTY Search		5
	6 / PTY +		6
	7		7
	8		8
	9		9
	0		0
	Volume +		Vol +
	Volume -		Vol -
	Tuning + / CH +		Ch +

Originalfernbedienung Ersatzfernbedienung

	Tuning - / CH -		Ch -
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Sleep		Sleep
	TV / Video /		TV/R
	Info		Info

