
 
 

 
 

 
 




 



 


 
 

 

 
 
 
 
 
 
 

 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Size		Format
	I>		Smart
	Subtitle		Subt
	Timer		Shift + AV
	Mix		3D
	[_]		Shift + Subt
	[?] Reveal		Options
	Message		Media
	Text		Text
	Source		AV
	Hold		Pause
	Red		Red
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue / H.Lock		Blue
	TV / DTV		TV/R
	CH.List		List
	Guide / Scan		Guide
	Fav. / Still		Pre Ch
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Info / Display		Info
	I/II / Nicam		Dual
	SUB / Sleep		Sleep
	ESC / Exit		Exit
	TV Menu		Menu
	DTV Menu		D. Menu





Originalfernbedienung Ersatzfernbedienung

VOL+	Vol +	+ VOL	Vol +
VOL-	Vol -31552073C6594	VOL -	Vol -
CH +	CH +	+ CH	Ch +
CH -	CH -	CH -	Ch -
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
ZOOM	Zoom	ZOOM ▲	Eject
RECALL	Recall	RETURN BACK	Back

Originalfernbedienung Ersatzfernbedienung

