
 

 
 






 

 

 




 
 

 

 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Last Memory		Green
	Condition Memory		Yellow
	Open/Close		Eject
	Audio		Dual
	Subtitle		Subt
	Angle		Red
	Repeat		Text
	Setup		Options
	Menu		Menu
	Top Menu		Shift + Menu
	Repeat A-B		3D
	Display		Info
	Return		Back
	I<</Prev		I<<
	>>I/Next		>>I
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Pause		Pause
	<I Step/Slow		Ch -
	Step/Slow I>		Ch +
	<</REV		<<
	FWD/>>		>>
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung    Ersatzfernbedienung

7	7	<b>7</b>	7
8	8	<b>8</b>	8
9	9	<b>9</b>	9
0	0	<b>0</b>	0
+10	+10	<b>GUIDE</b>	Guide
CLEAR	Clear	<b>CLEAR EXIT</b>	Exit
RANDOM	Random	<b>PICTURE FORMAT</b>	Format
PROGRAM	Program	<b>PROG SLEEP</b>	Sleep
SEARCH MODE	Search Mode	<b>SEARCH TV/R</b>	TV/R

Originalfernbedienung    Ersatzfernbedienung