



**Originalfernbedienung Ersatzfernbedienung**

	Open / Close		Eject / Surround
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Audio		Audio / Lang I/II
	0		0
	Display		Display / Media
	Repeat		Green / APP / Repeat
	Zoom		Zoom / Size
	Top Menu		D.Menu / Top

**Originalfernbedienung Ersatzfernbedienung**

	Top Menu		Menu / Home
	Up		Up
	Menu List		Smart / List
	Left		Left
	Enter		OK
	Right		Right
	Clear		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	I<< Skip		I<< / Preset-
	<< Rev		<< / Tune-
	Fwd >>		>> / Tune+
	Skip >>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	T-Set		Shift + Setup / OPT / Tools





Originalfernbedienung Ersatzfernbedienung

	1.3x / 0.8x Play		Picture / Format
	Instant Skip		Shift + >> /
	Timer Prog		Sleep / Timer
	VCR		Shift + 4
	DVD		Shift + 2
	Setup		Setup / OPT /
	Rec Mode		Rec / Rec Mode
	DVD Rec		Shift + Rec / Rec Mode
	Dubbing		Shift + Smart / List

Originalfernbedienung Ersatzfernbedienung








**Originalfernbedienung Ersatzfernbedienung**

	Open / Close		Eject / Surround
	Power		Power
	1		1
	2		2
	3		3
	Prog +		CH+ / Page+
	4		4
	5		5
	6		6
	Prog -		CH- / Page-
	7		7
	8		8
	9		9
	Audio		Audio / Lang I/II
	0		0
	Display		Display / Media
	Clear		Exit / Cancel / Clear

**Originalfernbedienung Ersatzfernbedienung**

	<<		<< / Tune-
	>>		>> / Tune+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	VCR		Shift + 4
	DVD		Shift + 2
	Rec Mode		Rec / Rec Mode
	VCR Rec		Shift + Rec / Rec Mode
	Slow		Shift + Play /
	Search		Red / Netflix / Search
	System		Setup / OPT /

