






 

 

 
 

 


 





 

 

 










**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Audio		Dual
	TV / STB		Shift + TV/R
	TV / R		TV/R
	Sleep		Sleep
	SUB		Subt
	TXT		Text
	P / N		Shift + 1
	Recall		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7






 


 





 






 
 
 
 
 

 
 
 



**Originalfernbedienung    Ersatzfernbedienung**

	8		8
	9		9
	0		0
	PGUP		Vol +
	PGDN		Vol -
	SAT		Shift + AV
	FAV +		Ch +
	FAV -		Ch -
	EPG		Guide
	Fav		Shift + Pre Ch
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Menu		Menu
	Exit		Exit



 



 



 




**Originalfernbedienung   Ersatzfernbedienung**

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Pause		Pause
	Zoom		Eject
	Edit		Format
	Info		Info
	USB		AV
	MP3		Media
	JPEG		Smart
	PVR List		List
	A - B		Back
	T.S.		Shift + 2
	Goto		Options
	Stop		Stop
	Rec		Rec

**Originalfernbedienung   Ersatzfernbedienung**

	<<		<<
	>>		>>
	Play / Pause		Play
	> <		Shift + Pause
	<<		<<
	>>		>>

