





 


 



 



 

 

 











 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DTV / ATV		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	P.Mode		Shift + Format
	S.Mode		Dual
	Aspect		Format

Originalfernbedienung Ersatzfernbedienung

	Still		Pause
	P -		Ch -
	P +		Ch +
	V -		Vol -
	V +		Vol +
	Sleep		Sleep
	Mute		Mute
	MTS		Shift + Media
	Menu		Menu
	Source		AV
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Exit		Exit
	i		Info



