 

 

 
 



 





 
 


 


 

 
 

 

 

 



 

 

 
 






**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	EPG		Guide / EPG / -/--
	4		4
	5		5
	6		6
	Audio		Audio / Lang I/II
	7		7
	8		8
	9		9
	Subtitle		Subtitle / EQ
	Info		Info / Angle
	0		0
	Recall		Back / Return

**Originalfernbedienung    Ersatzfernbedienung**

	TV / Radio		TV/Radio /
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Record		Rec / Rec Mode
	Down		Down
	Stop		Stop / Hold
	Vol +		Vol+
	CH +		CH+ / Page+
	Vol -		Vol-
	TTX		Text / Goto
	FAV		Fav / Marker / PC
	CH -		CH- / Page-
	Media		Display / Media



