


 





Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4/<< Shuttle		4
	5		5
	6/Shuttle >>		6
	7		7
	8		8
	9		9
	0/Screen Fit		0
	Audio		Dual
	Mode/Repeat		Text
	Zoom/SVHS		Shift + Eject
	3D Sound		3D
	Clear		Exit

Originalfernbedienung Ersatzfernbedienung

	TV/VCR		TV/R
	Clock/Counter		Options
	Angle/A. TRK		Pre Ch
	View to DVD		Media
	View to VCR		Smart
	Input Sel		AV
	Digest/F.ADV/Step		Format
	TRK Up		Vol +
	TRK Down		Vol -
	Prog+		Ch +
	Prog-		Ch -
	Display		Info
	<<		<<
	I<<		I<<
	Stop		Stop
	Play		Play
	Pause		Pause





Originalfernbedienung Ersatzfernbedienung

	>>		>>
	>>		>>
	Rec		Rec
	Disc Menu		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Setup/Enter		Ok
	Return/A.DUB		Back
	Title/Speed		Guide
	Subtitle/Timer		Subt
	Mark/Index		List

Originalfernbedienung Ersatzfernbedienung