








 











 



 
 
 










**Originalfernbedienung    Ersatzfernbedienung**

	On		Power
	Standby		Shift + Power
	ID 1		Red
	ID 2		Green
	ID 3		Yellow
	ID 4		Blue
	Computer 1		1
	Computer 2		2
	Computer 3		3
	LAN		4
	USB Type A		5
	USB Type B		6
	Component		7
	S.Video		8
	Video		9
	HDMI 1		Guide
	HDMI 2		0


**Originalfernbedienung    Ersatzfernbedienung**

	Digital		Pre Ch
	Page Up		Ch +
	Page Down		Ch -
	Magnify On		Smart
	Magnify Off		Media
	Vol+		Vol +
	Vol-		Vol -
	AV Mute		Mute
	Freeze		Pause
	F5		Text
	Reset		AV
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok


 





 







 

 




 





 









**Originalfernbedienung    Ersatzfernbedienung**

	On		Power
	Standby		Shift + Power
	ID 1		Red
	ID 2		Green
	ID 3		Yellow
	ID 4		Blue
	Computer 1		1
	Computer 2		2
	Computer 3		3
	LAN		4
	USB Type A		5
	USB Type B		6
	Component		7
	S.Video		8
	Video		9
	HDMI 1		Guide
	HDMI 2		0

**Originalfernbedienung    Ersatzfernbedienung**



	Digital		Pre Ch
	Page Up		Ch +
	Page Down		Ch -
	Magnify On		Smart
	Magnify Off		Media
	Vol+		Vol +
	Vol-		Vol -
	AV Mute		Mute
	Freeze		Pause
	F5		Text
	Reset		AV
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok








 



 












 




 
 








**Originalfernbedienung    Ersatzfernbedienung**

	On		Power
	Standby		Shift + Power
	ID 1		Red
	ID 2		Green
	ID 3		Yellow
	ID 4		Blue
	Computer 1		1
	Computer 2		2
	Computer 3		3
	LAN		4
	USB Type A		5
	USB Type B		6
	Component		7
	S.Video		8
	Video		9
	HDMI 1		Guide
	HDMI 2		0

**Originalfernbedienung    Ersatzfernbedienung**



	Digital		Pre Ch
	Page Up		Ch +
	Page Down		Ch -
	Magnify On		Smart
	Magnify Off		Media
	Vol+		Vol +
	Vol-		Vol -
	AV Mute		Mute
	Freeze		Pause
	F5		Text
	Reset		AV
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok




 




 

 





 

 




 





 







**Originalfernbedienung    Ersatzfernbedienung**

	On		Power
	Standby		Shift + Power
	ID 1		Red
	ID 2		Green
	ID 3		Yellow
	ID 4		Blue
	Computer 1		1
	Computer 2		2
	Computer 3		3
	LAN		4
	USB Type A		5
	USB Type B		6
	Component		7
	S.Video		8
	Video		9
	HDMI 1		Guide
	HDMI 2		0

**Originalfernbedienung    Ersatzfernbedienung**

	Digital		Pre Ch
	Page Up		Ch +
	Page Down		Ch -
	Magnify On		Smart
	Magnify Off		Media
	Vol+		Vol +
	Vol-		Vol -
	AV Mute		Mute
	Freeze		Pause
	F5		Text
	Reset		AV
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok



