



 


 
 
 
 

 

 
 
 
 

 











 



 


 

 

 
 

 
 
 
 
 
 
 
 
 

 
 

 

 

 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	CH List		List
	CH+		Ch +
	CH-		Ch -
	Netflix		Shift + Media
	Home		Smart
	Rakuten Tv		TV/R
	Prime Video		Media
	Guide		Guide
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green



