 
 

 

 
 


 

 



 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV / Radio		TV/R
	Recall		Pre Ch
	P.Mode		Format
	S.Mode		Dual
	Audio		Shift + Dual

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Source		AV
	CH +		Ch +
	CH -		Ch -
	Vol +		Vol +
	Vol -		Vol -
	Info		Info
	Rec		Rec
	R.List		List
	Fav		Shift + Pre Ch
	Guide		Guide
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Menu		Menu





Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	I<< / Text		I<<
	I<< / Text		Text
	>>I / Hold		>>I
	>>I / Hold		Shift + Pause
	<< / Size		<<
	>> / Reveal		>>
	Play/Pause / Index		Play
	Play/Pause / Index		Pause
	Blue / D.Display		Shift + Info
	Stop / Subpage		Stop
	Stop / Subpage		Shift + Subt
	Open/Close / Time Shift		Shift + Exit
	Subtitle		Subt
	Repeat		Shift + Text
	Goto		Shift + Guide
	A - B		Back

Originalfernbedienung Ersatzfernbedienung

	Lang / Audio		Smart
	Red / D.Setup		Red
	Red / D.Setup		Options
	Green / D.Menu		Green
	Green / D.Menu		D. Menu
	Yellow / D.Title		Yellow
	Blue / D.Display		Blue

