 


 















 




 



 
 
 
 

 
 
 



 




 
 


 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Reclist		Smart
	Recall		Pre Ch
	EPG		Guide
	Subtitle		Subt
	Audio		Dual

Originalfernbedienung Ersatzfernbedienung

	Display		Info
	TV / Radio		TV/R
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Menu		Menu
	Exit		Exit
	Vol +		Vol +
	Vol -		Vol -
	FAV		Shift + Pre Ch
	Rec		Rec
	Media		Media
	CH +		Ch +
	CH -		Ch -
	Source		AV



