


 

 

 

 
 
 



 
 
 


 

 
 
 




 


 
 
 





 



 




 
 
 

 

 

 

 
 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	APP		Media
	CH +		Ch +
	CH -		Ch -
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	List		List
	Vol +		Vol +
	Vol -		Vol -
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Back		Back
	Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Audio		Dual
	Subt		Subt
	Text		Text





Originalfernbedienung Ersatzfernbedienung

	Still		Pause
	L -		<<
	L +		>>
	EPG		Guide
	TV / Rad.		TV/R
	TV / AV		AV
	OPT		Options

Originalfernbedienung Ersatzfernbedienung