



 

 


 



 

 
 


 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Record		Rec
	SV/V+		AV
	Timer		Shift + AV
	Timer		Sleep
	Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	<<		<<

Originalfernbedienung Ersatzfernbedienung

	>>		>>
	Stop		Stop
	Play		Play
	Up / P +		Up
	Up / P +		Ch +
	Down / P -		Down
	Down / P -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	Mute		Mute
	Menu		Menu
	OK		Ok
	> / Index		Info
	> / Index		>>
	[X]		Back



