
 


 
 



 


 








**Originalfernbedienung    Ersatzfernbedienung**

|   |                 |   |         |
|---|-----------------|---|---------|
|    | Power           |    | Power   |
|    | Open / Close    |    | Eject   |
|    | Input           |    | AV      |
|    | DVD             |    | Smart   |
|    | VCR             |    | Media   |
|    | TV / VCR        |    | TV/R    |
|    | Setup           |    | Menu    |
|    | Disc Menu       |    | D. Menu |
|    | Up / PR/TRK +   |    | Up      |
|    | Up / PR/TRK +   |    | Ch +    |
|   | Down / PR/TRK - |   | Down    |
|  | Down / PR/TRK - |  | Ch -    |
|  | Right           |  | Right   |
|  | Left            |  | Left    |
|  | OK              |  | Ok      |
|  | Display         |  | Info    |
|  | Back            |  | Back    |

**Originalfernbedienung    Ersatzfernbedienung**

|   |              |   |       |
|---|--------------|---|-------|
|    | Pause / Step |    | Pause |
|    | I<< Prev     |    | I<<   |
|    | >>I Next     |    | >>I   |
|    | Stop         |    | Stop  |
|    | << Rew       |    | <<    |
|    | Play         |    | Play  |
|    | >> FFW       |    | >>    |
|    | 1            |    | 1     |
|    | 2            |    | 2     |
|    | 3            |    | 3     |
|   | 4            |   | 4     |
|  | 5            |  | 5     |
|  | 6            |  | 6     |
|  | 7            |  | 7     |
|  | 8            |  | 8     |
|  | 9            |  | 9     |
|  | 0            |  | 0     |


 








 

 





 

 







 
 
 






 
 

 

 




**Originalfernbedienung Ersatzfernbedienung**

|   |                 |   |       |
|---|-----------------|---|-------|
|    | Power           |    | Power |
|    | Open / Close    |    | Eject |
|    | Input           |    | AV    |
|    | DVD             |    | Smart |
|    | VCR             |    | Media |
|    | TV / VCR        |    | TV/R  |
|    | Setup           |    | Menu  |
|    | Up / PR/TRK +   |    | Up    |
|    | Up / PR/TRK +   |    | Ch +  |
|    | Down / PR/TRK - |    | Down  |
|   | Down / PR/TRK - |   | Ch -  |
|  | Right           |  | Right |
|  | Left            |  | Left  |
|  | OK              |  | Ok    |
|  | Display         |  | Info  |
|  | Pause / Step    |  | Pause |
|  | Stop            |  | Stop  |

**Originalfernbedienung Ersatzfernbedienung**

|   |        |   |              |
|---|--------|---|--------------|
|    | << Rew |    | <<           |
|    | Play   |    | Play         |
|    | >> FFW |    | >>           |
|    | 1      |    | 1            |
|    | 2      |    | 2            |
|    | 3      |    | 3            |
|    | 4      |    | 4            |
|    | 5      |    | 5            |
|    | 6      |    | 6            |
|    | 7      |    | 7            |
|   | 8      |   | 8            |
|  | 9      |  | 9            |
|  | 0      |  | 0            |
|  | Clear  |  | Exit         |
|  | Marker |  | Pre Ch       |
|  | Record |  | Rec          |
|  | Search |  | Shift + TV/R |



