









 

 
 
 




 
 
 
 


 

 











 

 



 



 

 



 



 
 
 

 


 





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Source		AV
	YouTube		Media
	Netflix		Smart
	FPay		Shift + Smart
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	Lang.		Dual
	<<		<<
	>>		>>
	[≡]...		Subt
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Recall		Pre Ch
	Menu		Menu
	WWW		Shift + Media
	Q.Menu		D. Menu
	Vol+		Vol +
	Vol-		Vol -





Originalfernbedienung    Ersatzfernbedienung

	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Back		Back
	Exit		Exit
	[-O-]		Format
	i		Info
	FAV		Shift + Pre Ch
	Mute		Mute
	Music/Picture/Mov		Options
	*/O		3D
	[≡]		Text
	Guide		Guide

Originalfernbedienung    Ersatzfernbedienung