 



 



 

 



 

 

 

 



 

 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV/Rad		TV/Radio /
	Mute		Mute / Dimmer
	TV/SAT		AV / Input / RDS
	Edit		Sound / Title
	Sleep		Sleep / Timer
	Mosaic		D.Menu / Top
	Freeze		Shift + Pause / Step /
	Zoom		Zoom / Size
	EPG		Guide / EPG / -/--
	Subtitle		Subtitle / EQ
	FAV		Fav / Marker / PC
	Audio		Audio / Lang / I/II
	A-Z		Eject / Surround
	USB		Shift + 8
	Text		Text / Goto
	Info		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Up / CH+		Up
	Up / CH+		CH+ / Page+
	SAT		Shift + 0
	SAT		Display / Media
	Vol-		Vol-
	Left / V-		Left
	OK		OK
	Right / V+		Right
	Recall		Back / Return
	Down / CH-		CH- / Page-
	Down / CH-		Down
	File List		Smart / List
	Play		Play / Slow
	Stop		Stop / Hold





Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Advance		>> / Preset+
	Rec		Rec / Rec Mode
	Slow		Shift + Play /
	Red / Book		Red / Netflix / Search
	Red / Book		Shift + Fav / Marker / PC
	Green		Green / APP / Repeat
	Yellow / Color		Yellow / YouTube / Repeat
	Blue / POS		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	V-Format		Picture / Format
	0		0
	Wide		Setup / OPT /

